


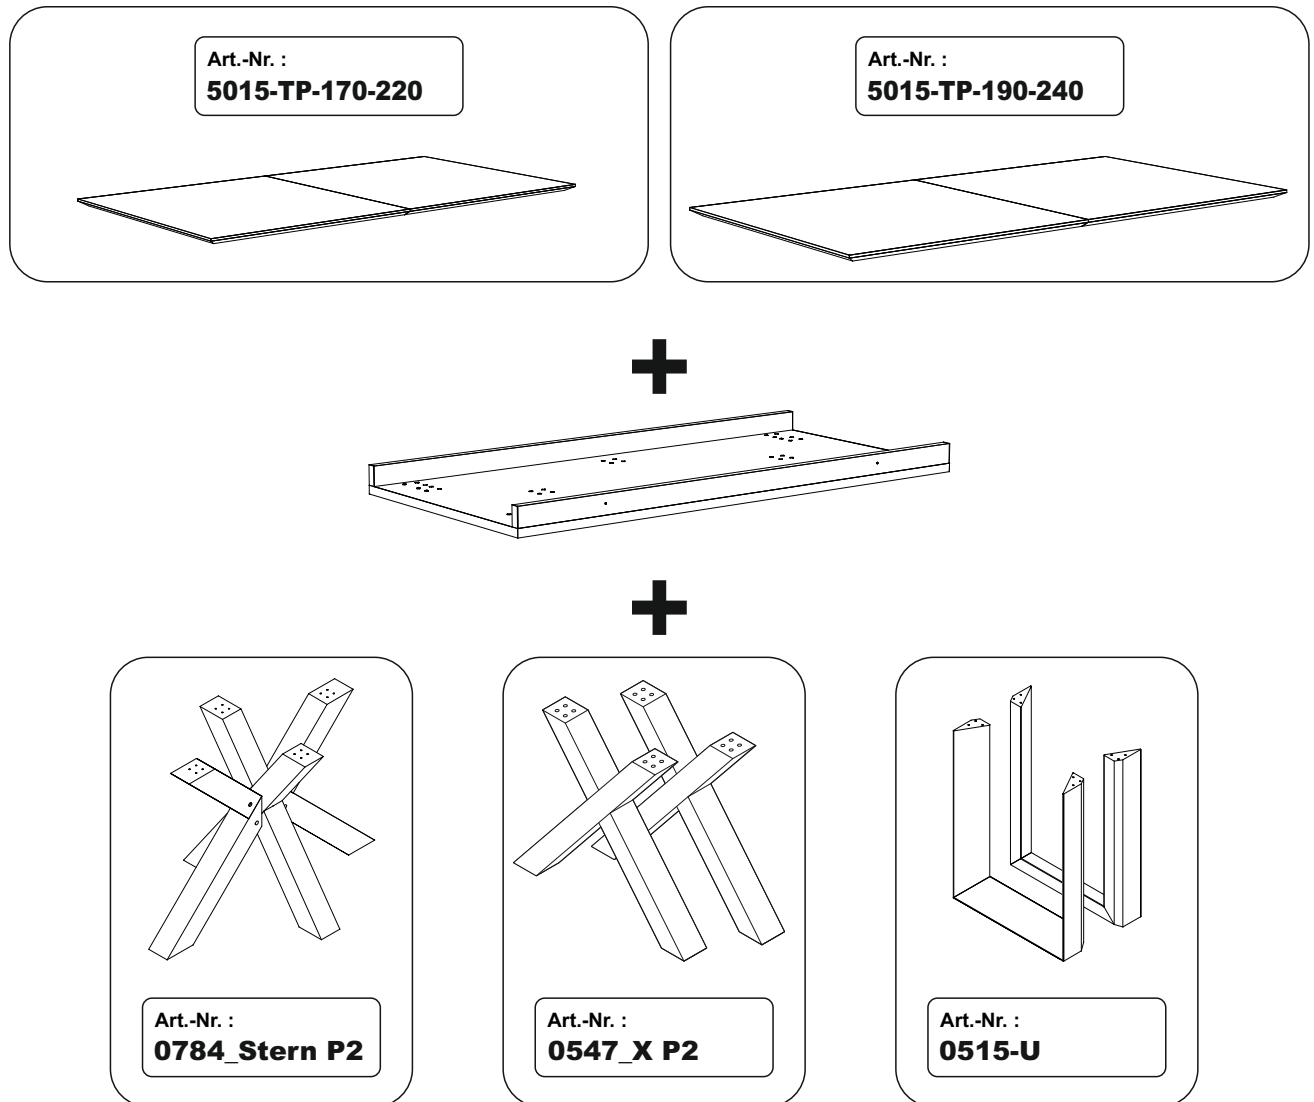


Artikel.-Nr.:



5015-VT

Montageanleitung.-Nr.:

MA1-00587

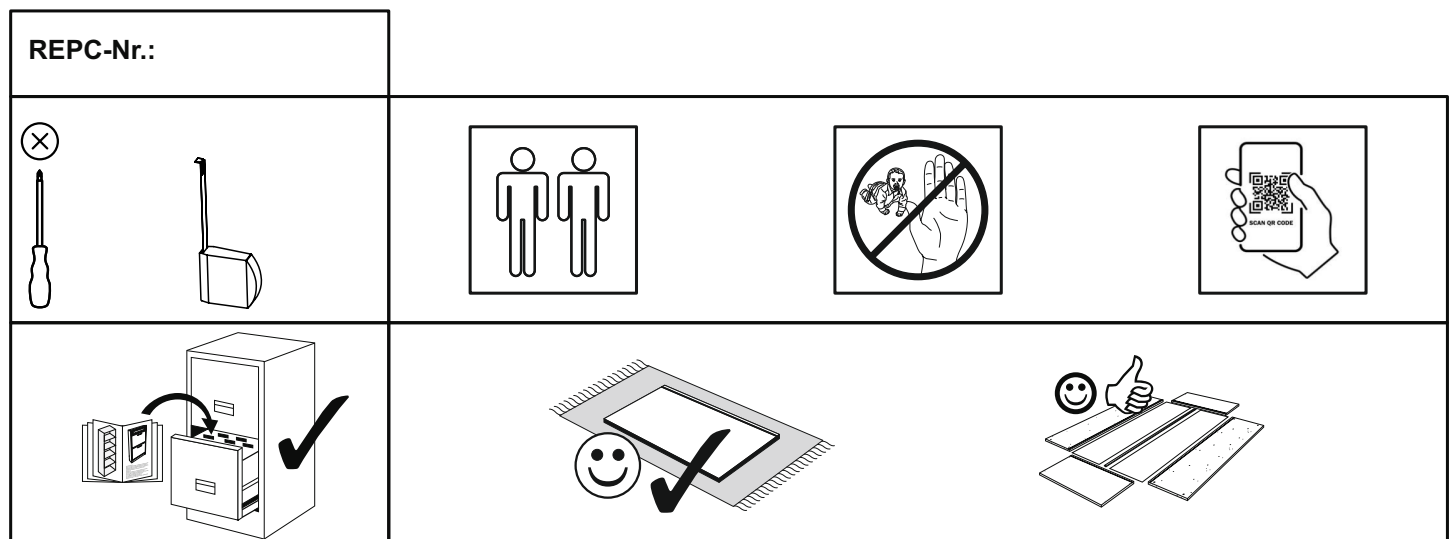


BT1-00687 Colli 1/1


B01-110		B01-120		B01-39-16		B01-90	
8x		10x		24x		2x	
B02-170		B02-174		B05-260			
2x		4x		1x			

BT1-00001 Colli 1/1


B05-265	
1x	





Colli 1/1




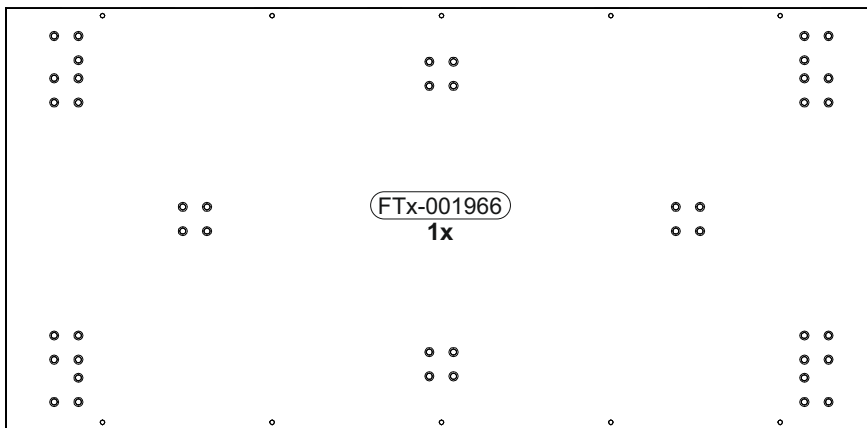


1152x558



1152x44

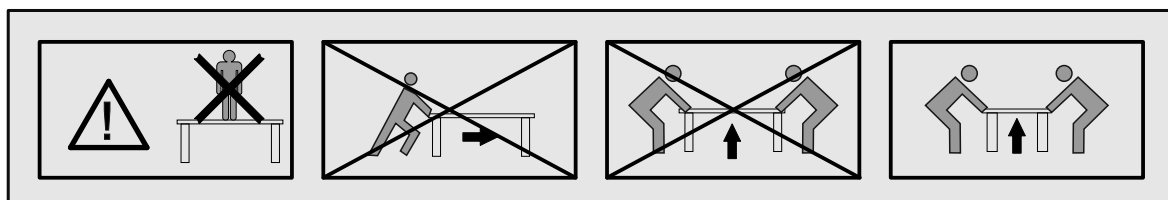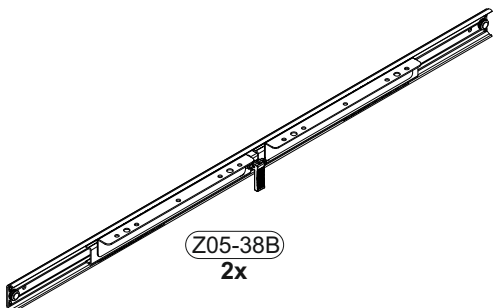


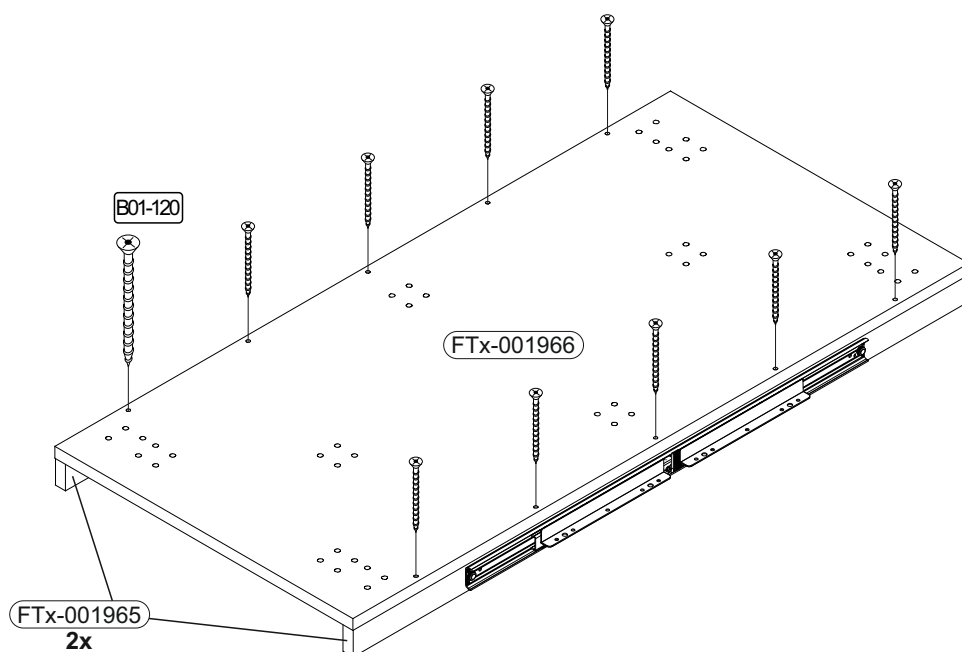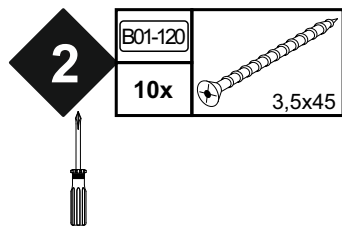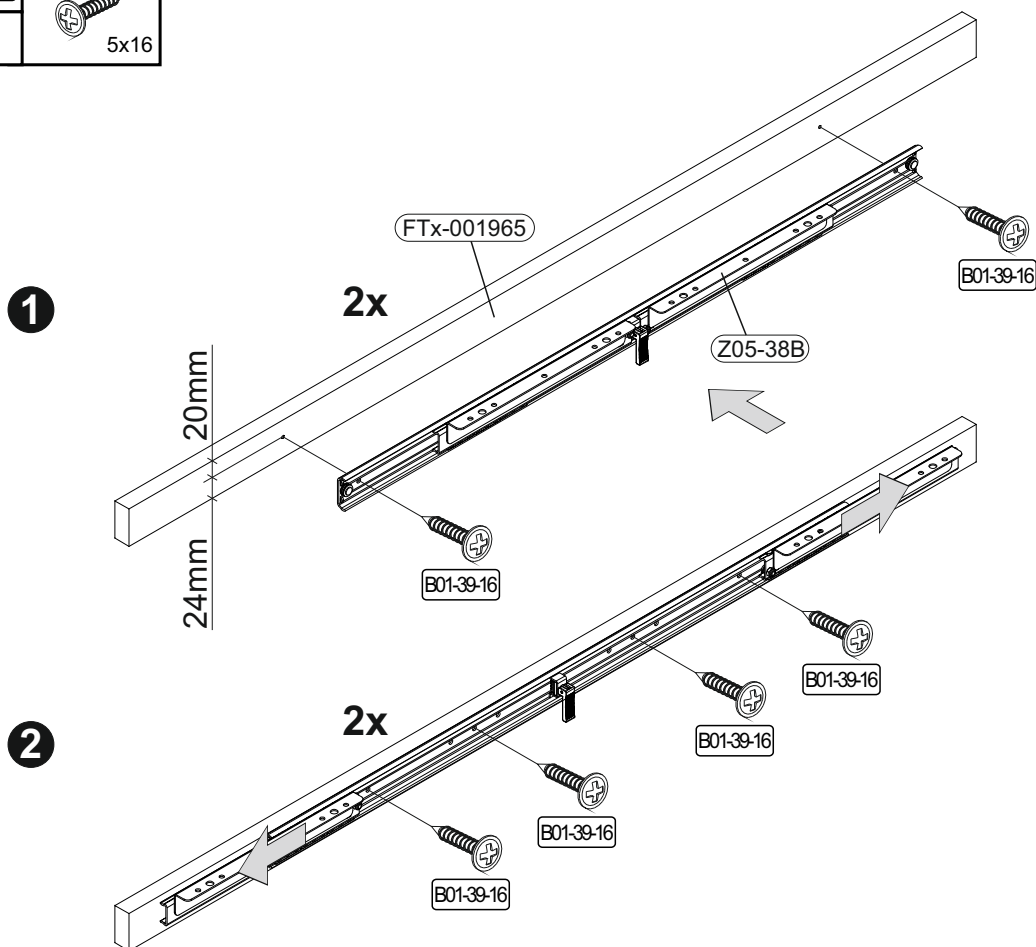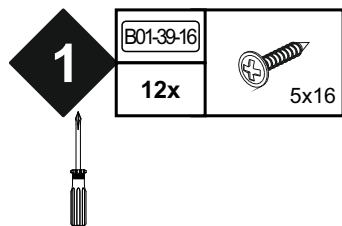

3




B01-110	
8x	3,5x35
B02-174	
4x	


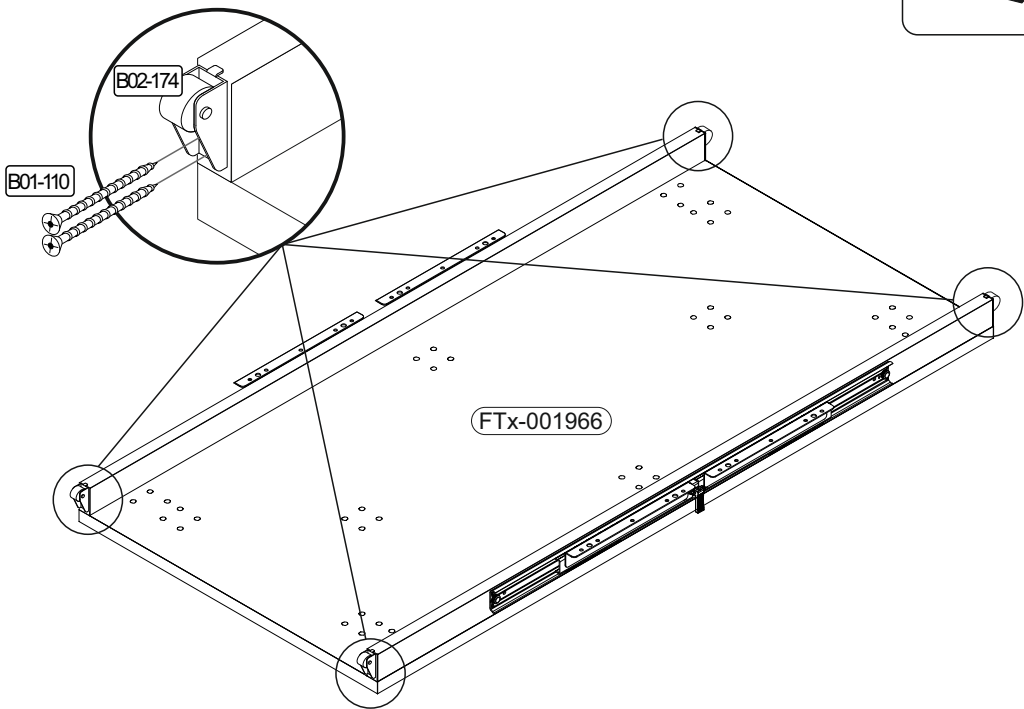


4






B01-90		B02-170	
2x	3,5x20	2x	


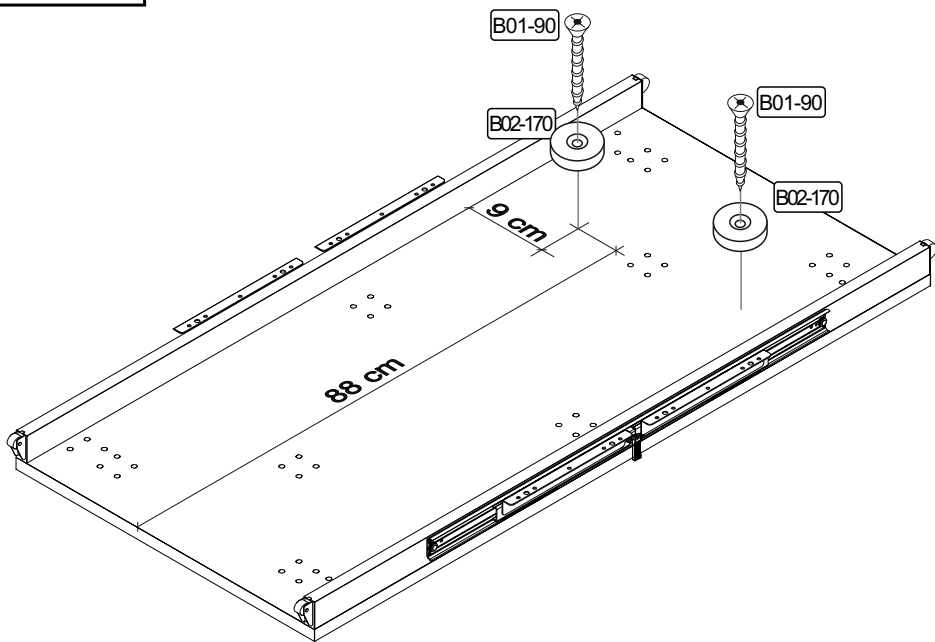


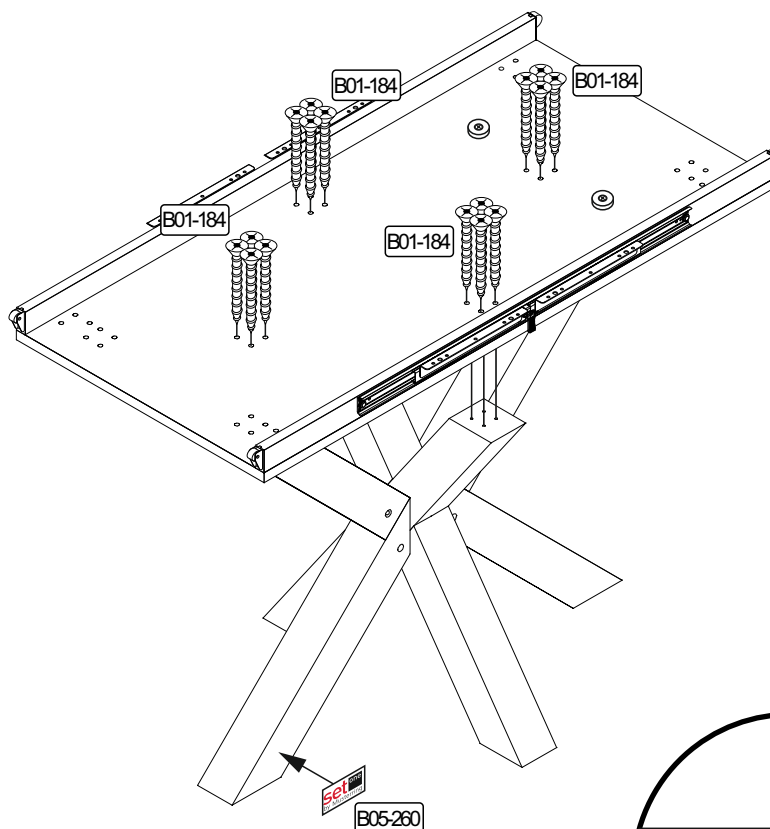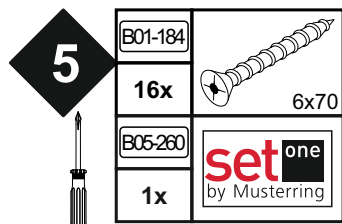


Art.-Nr. :
0784_Stern P2

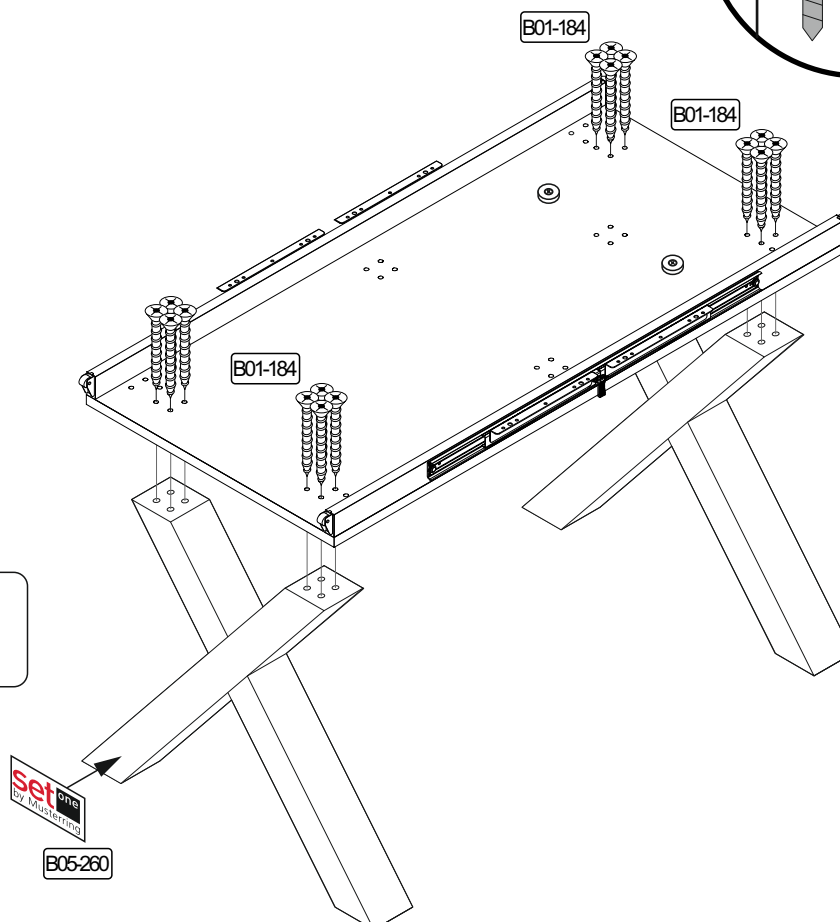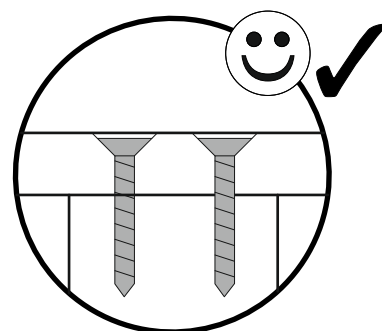

Art.-Nr. :
0547_X P2

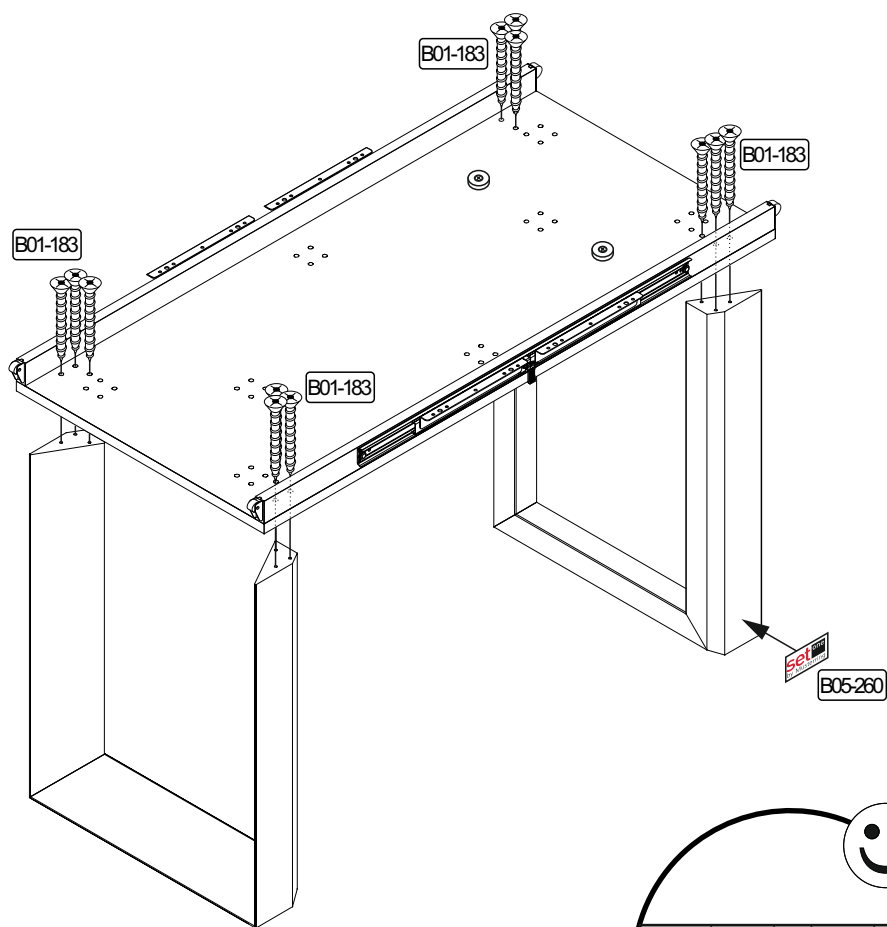


Art.-Nr. :
0515-U

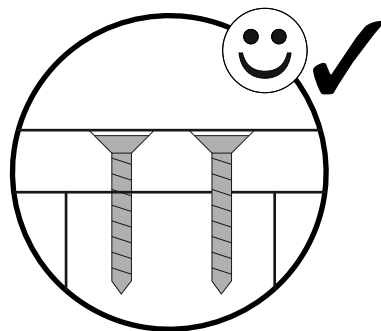


Art.-Nr. :


5015-TP-170-220

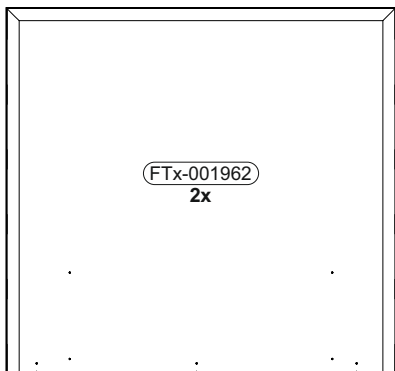

900x850

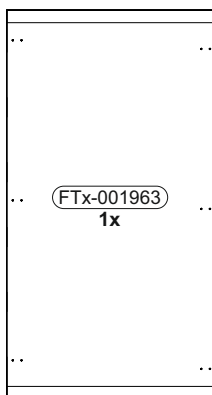


900x484

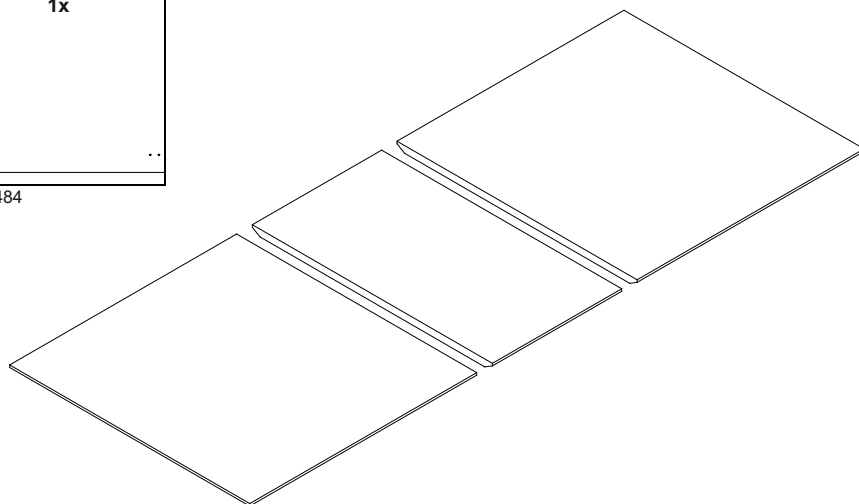


Art.-Nr. :

5015-TP-190-240

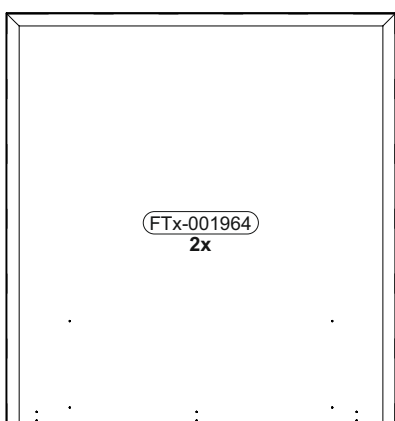

900x950

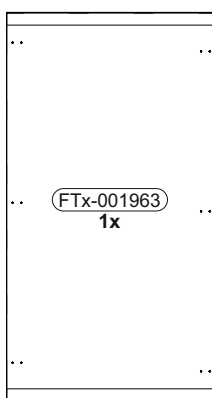

900x484

