
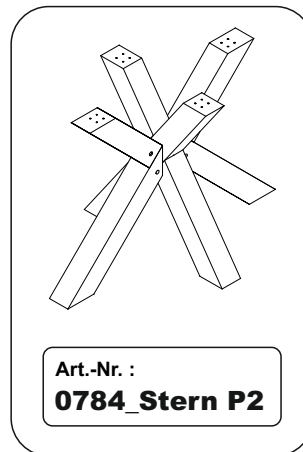
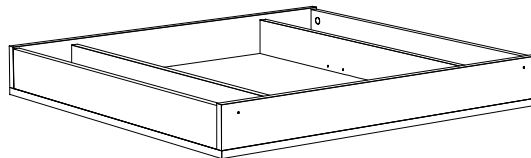


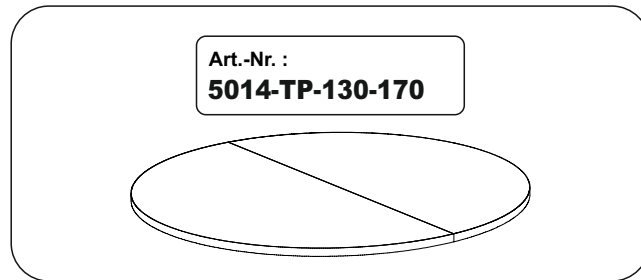

Artikel.-Nr.:




5016-VT

Montageanleitung.-Nr.:

MA1-00592


REPC-Nr.:	

BT1-00689 Colli 1/1


B01-120		B01-39-16		B01-240		B01-90		B02-170	
18x		36x		1x		1x		1x	
B02-90		B04-60		B02-10		B02-20		B05-260	
8x		2x		8x		8x		1x	

BT1-00001 Colli 1/1


B05-265	
1x	Pflegeanweisung




Colli 1/1

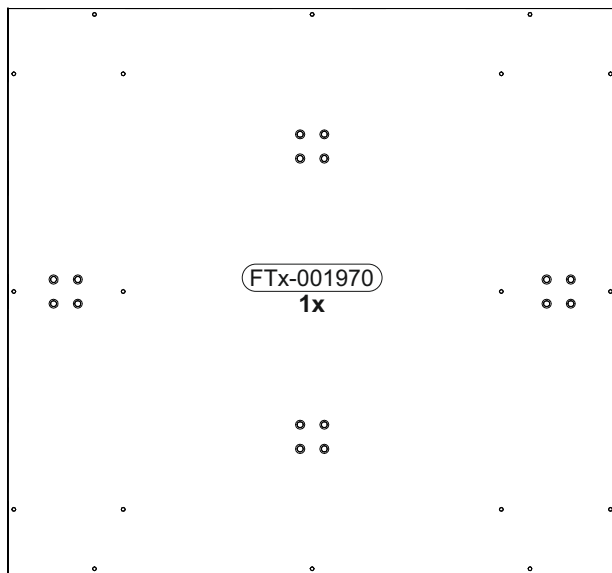


805x749




718x84




718x76











805x88

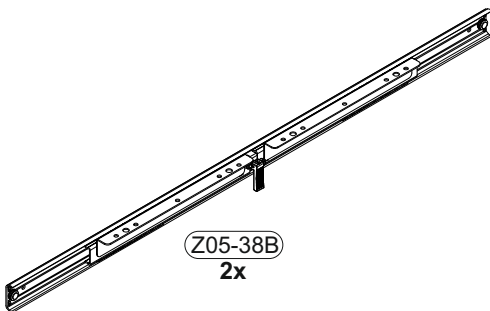



Z05-38B
2x

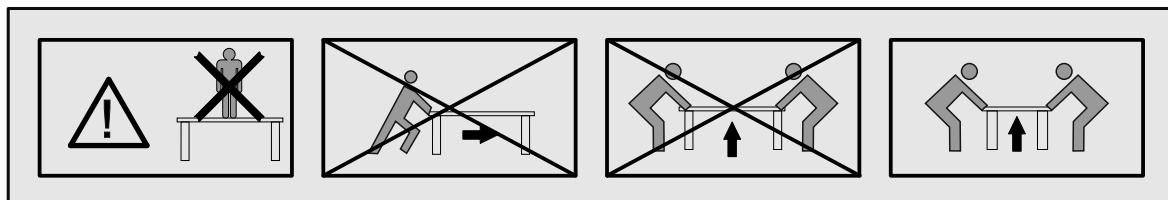

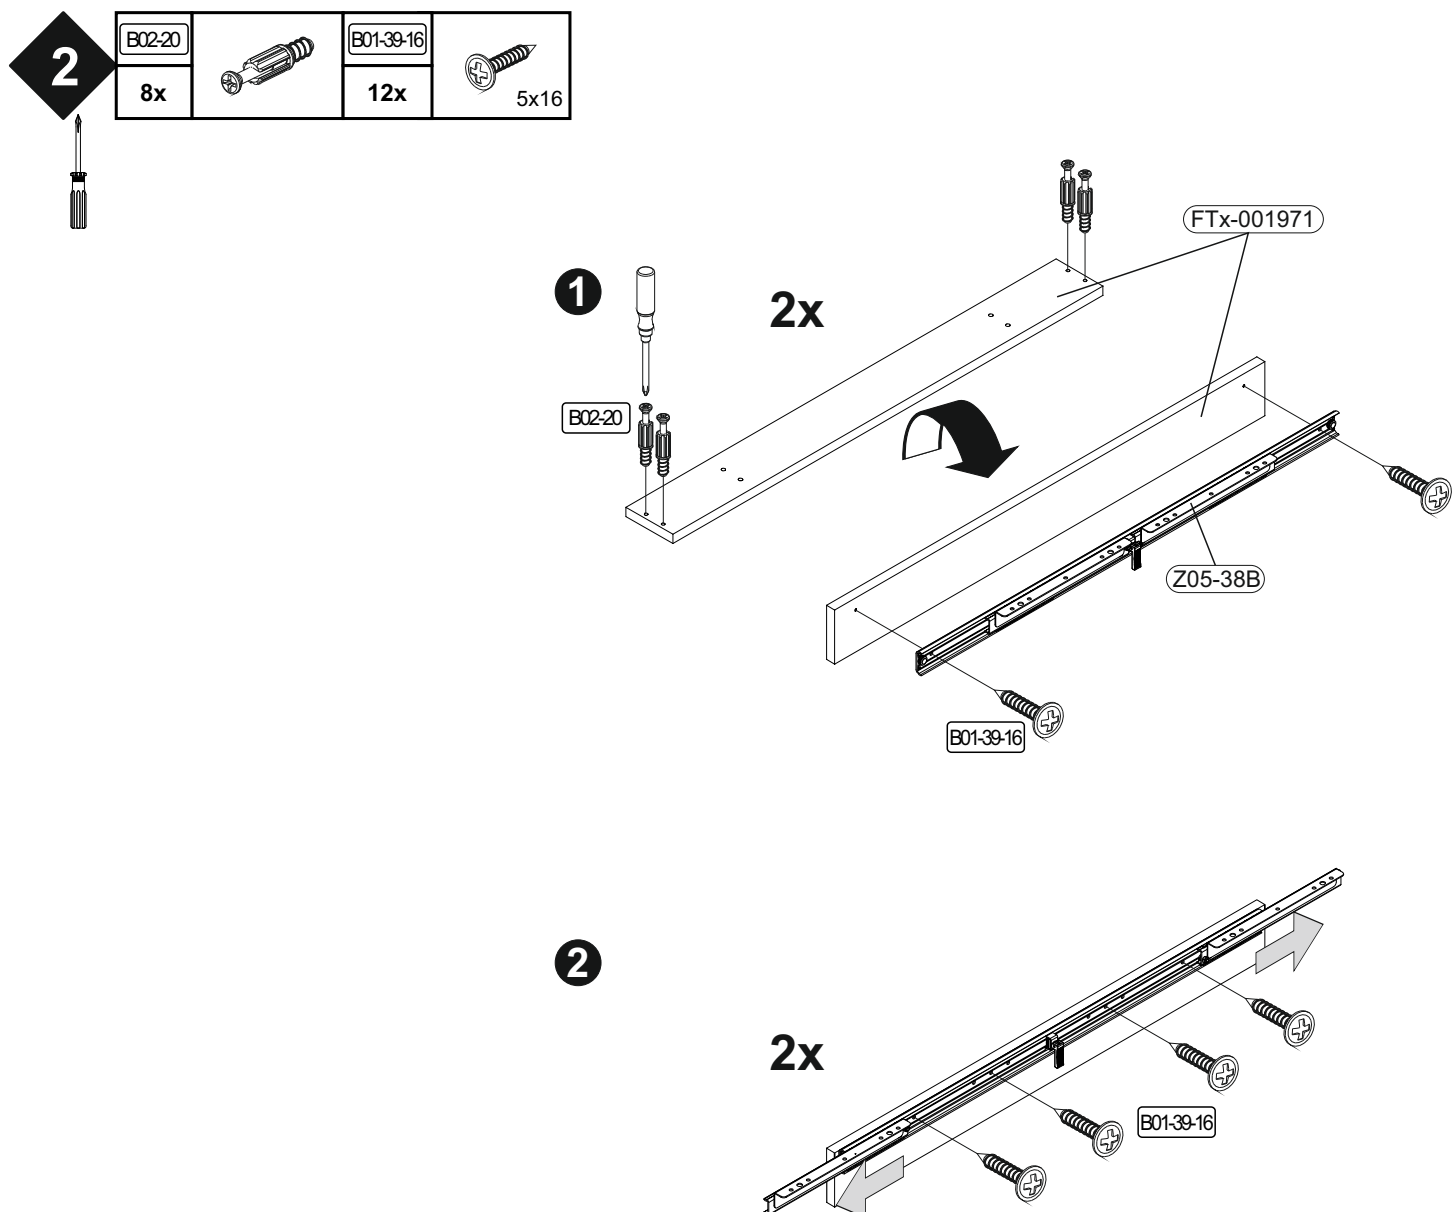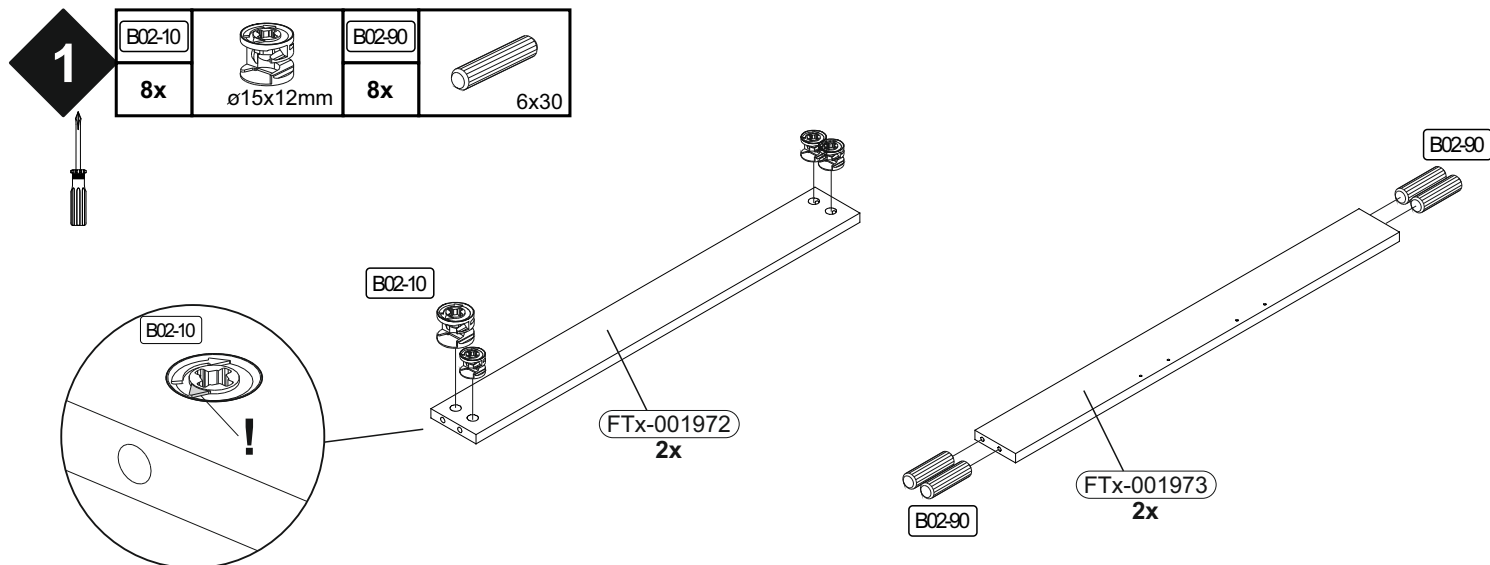

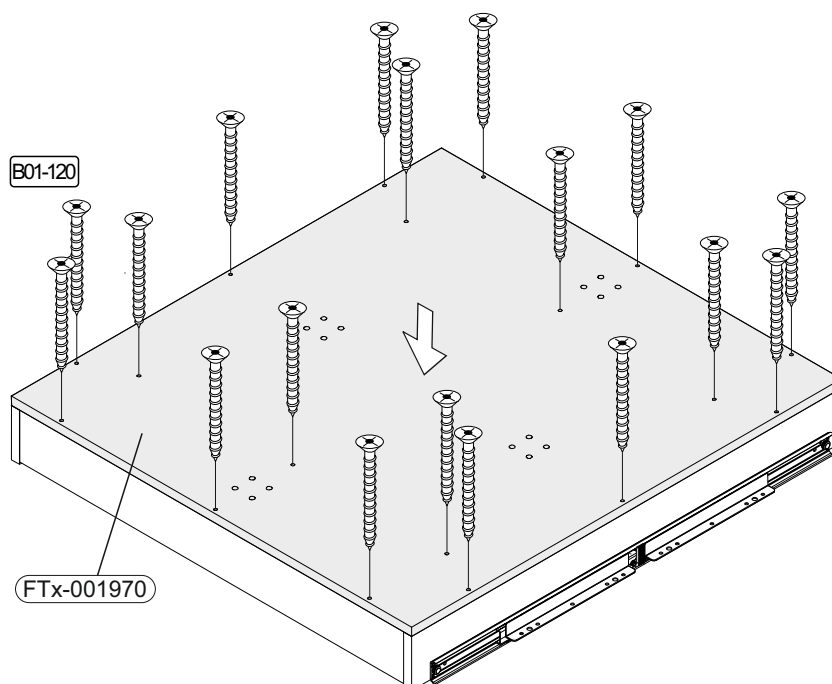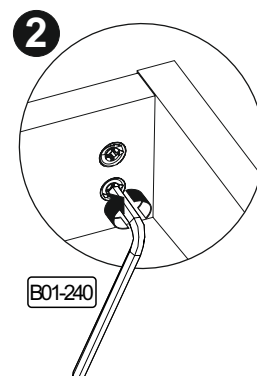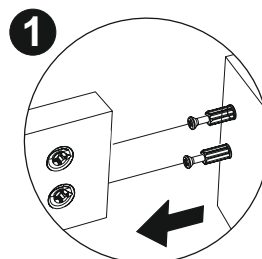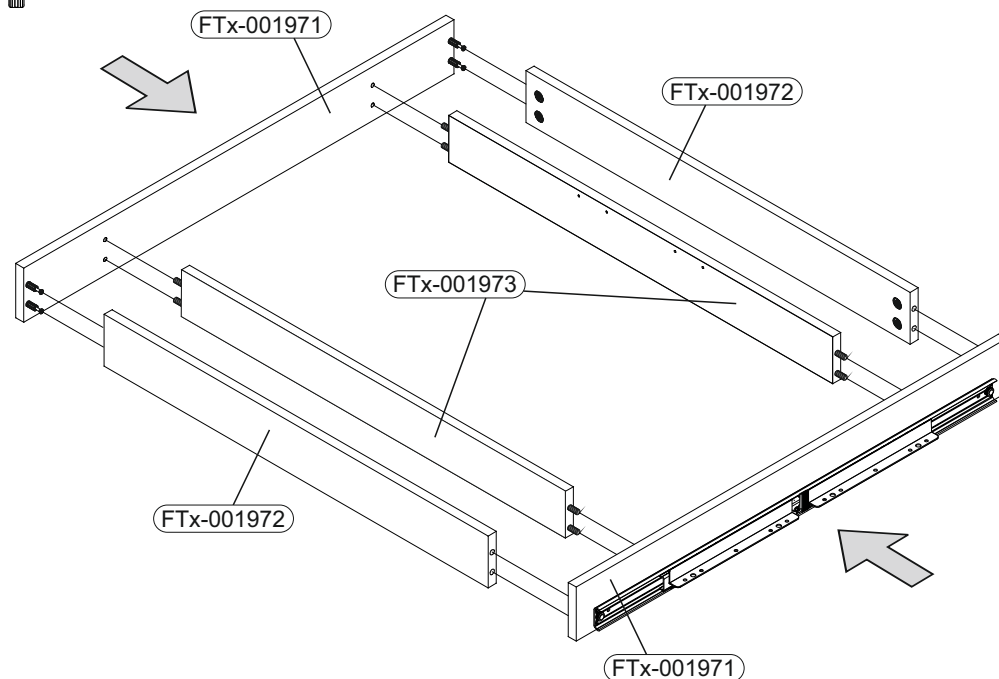



5

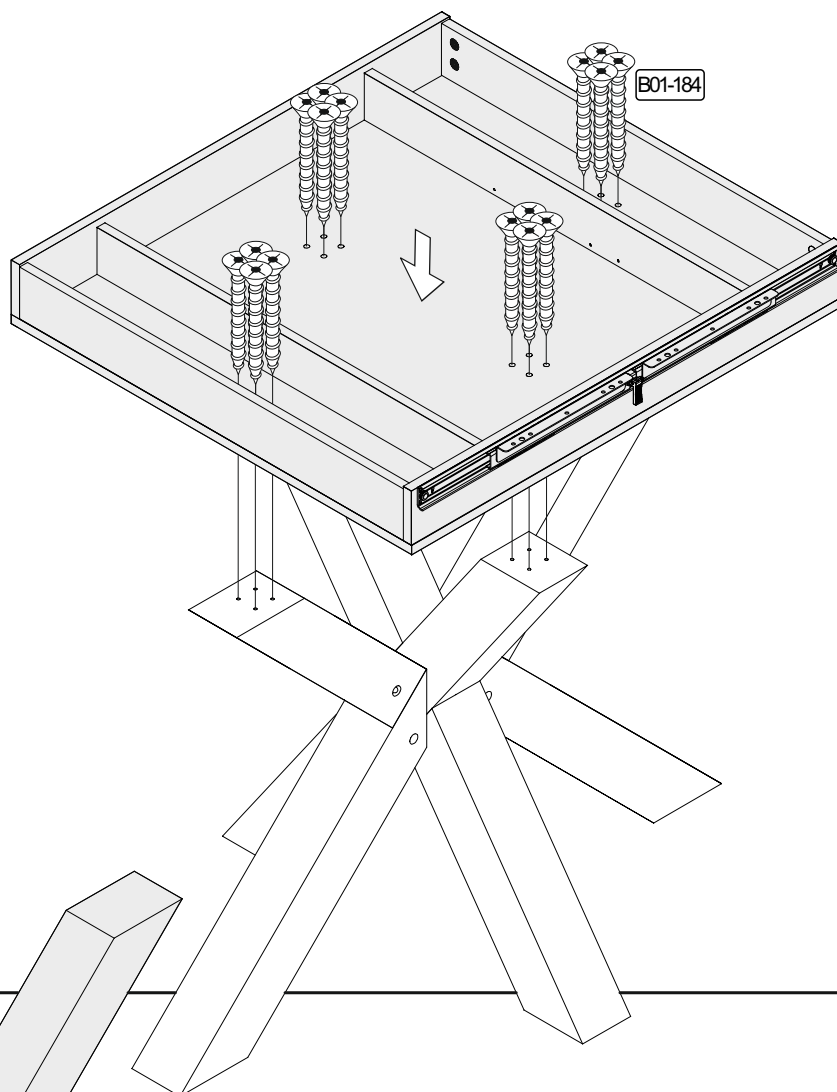


Art.-Nr. :

0784_Stern P2

6

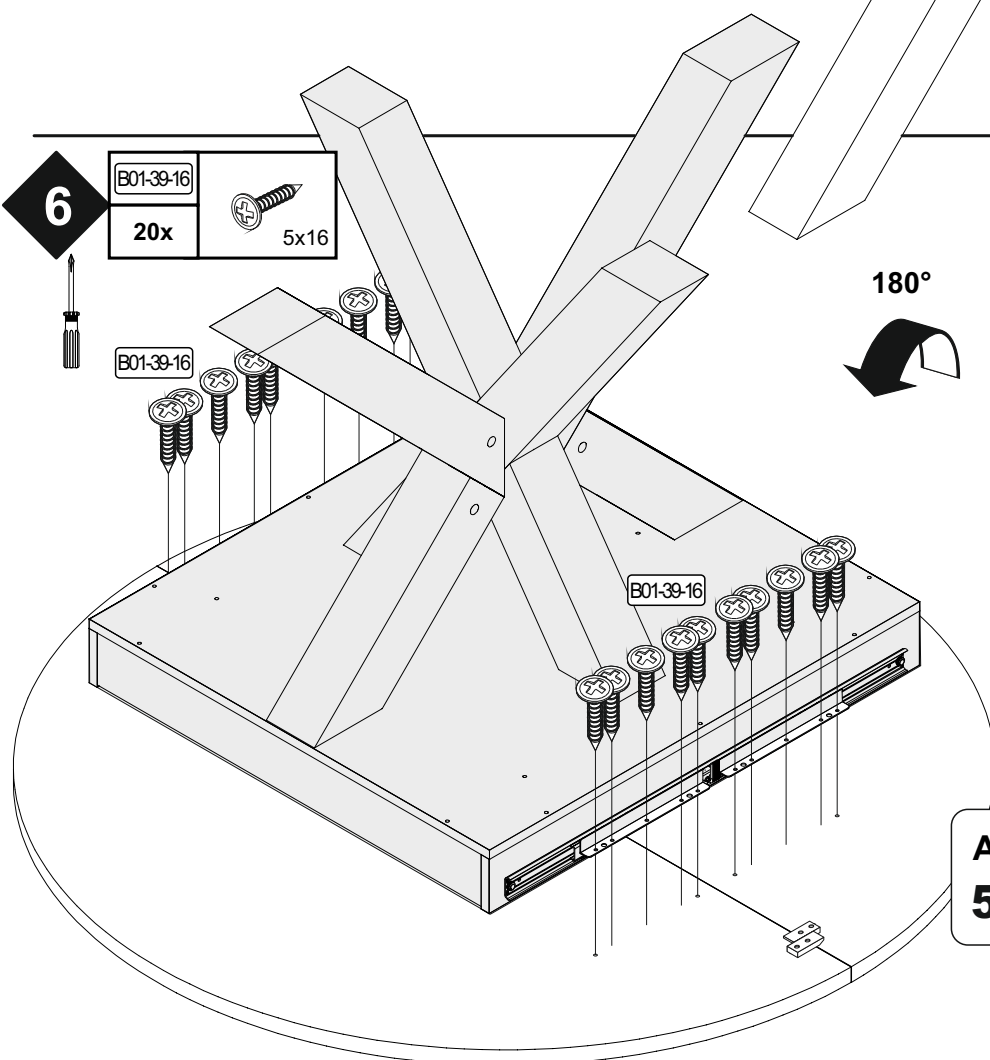

180°

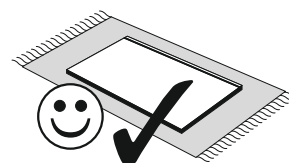


Art.-Nr. :

5014-TP-130-170


7




B02-170	
1x	
B01-90	
1x	3,5x20
B04-60	
2x	
B01-39-16	
4x	5x16

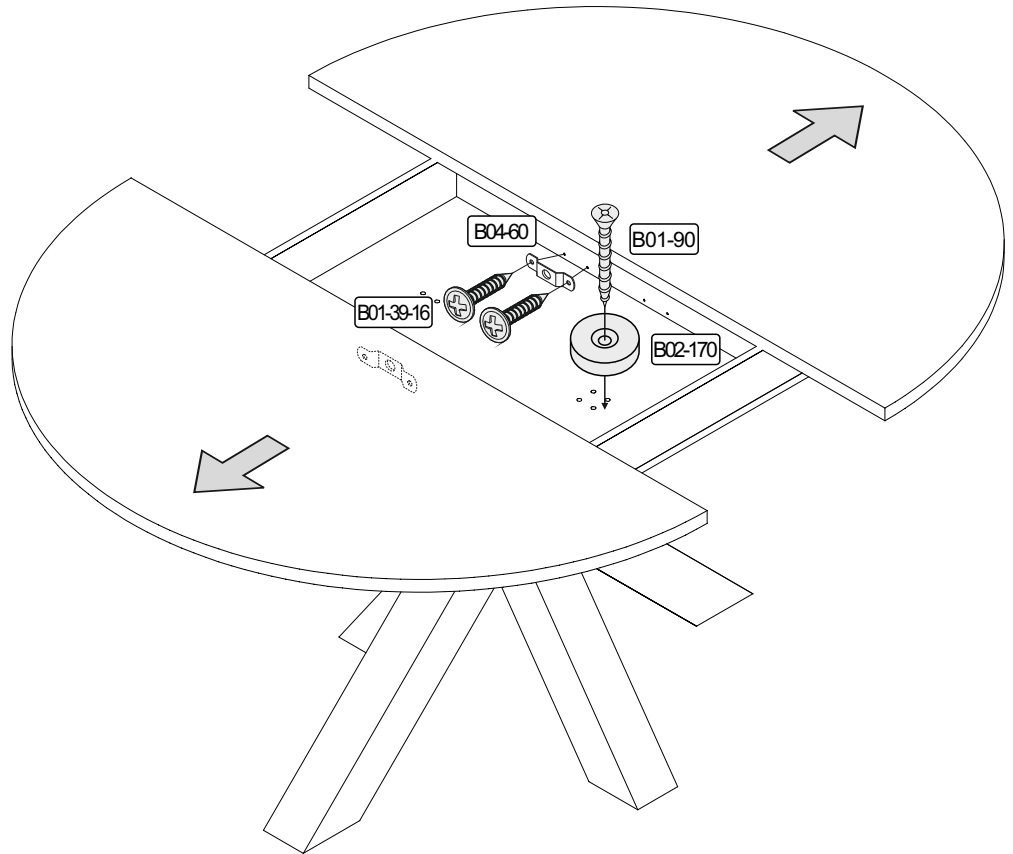

8

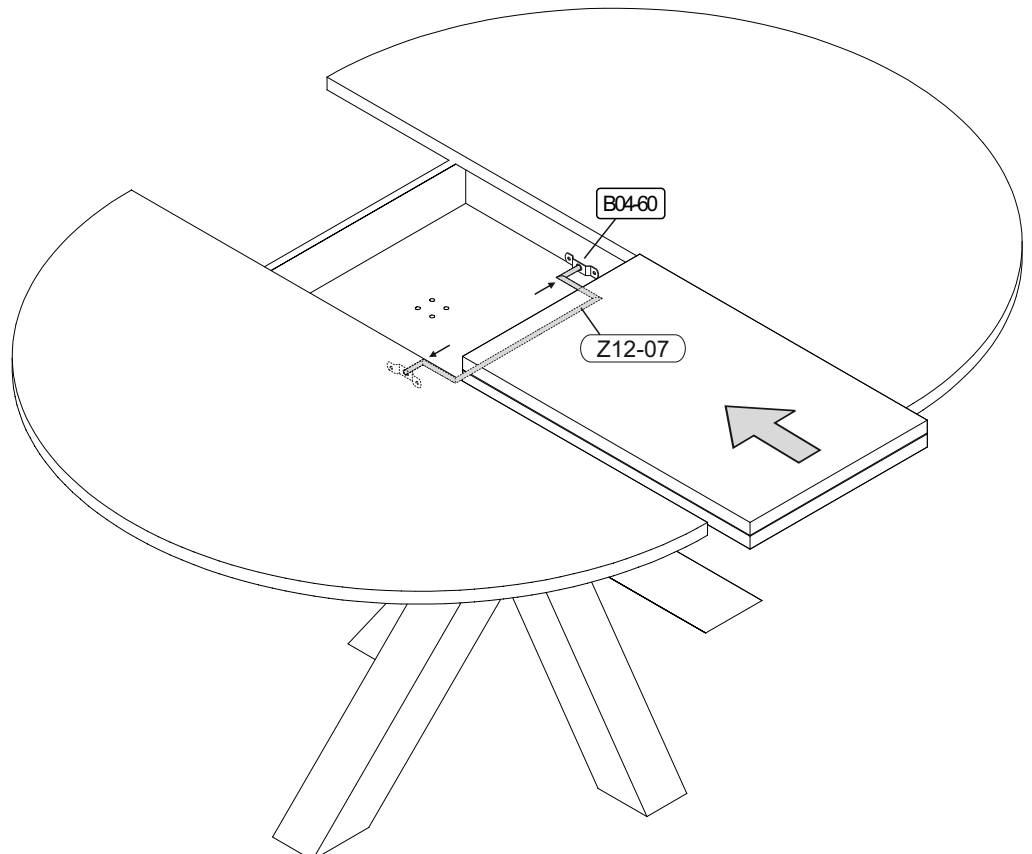

9

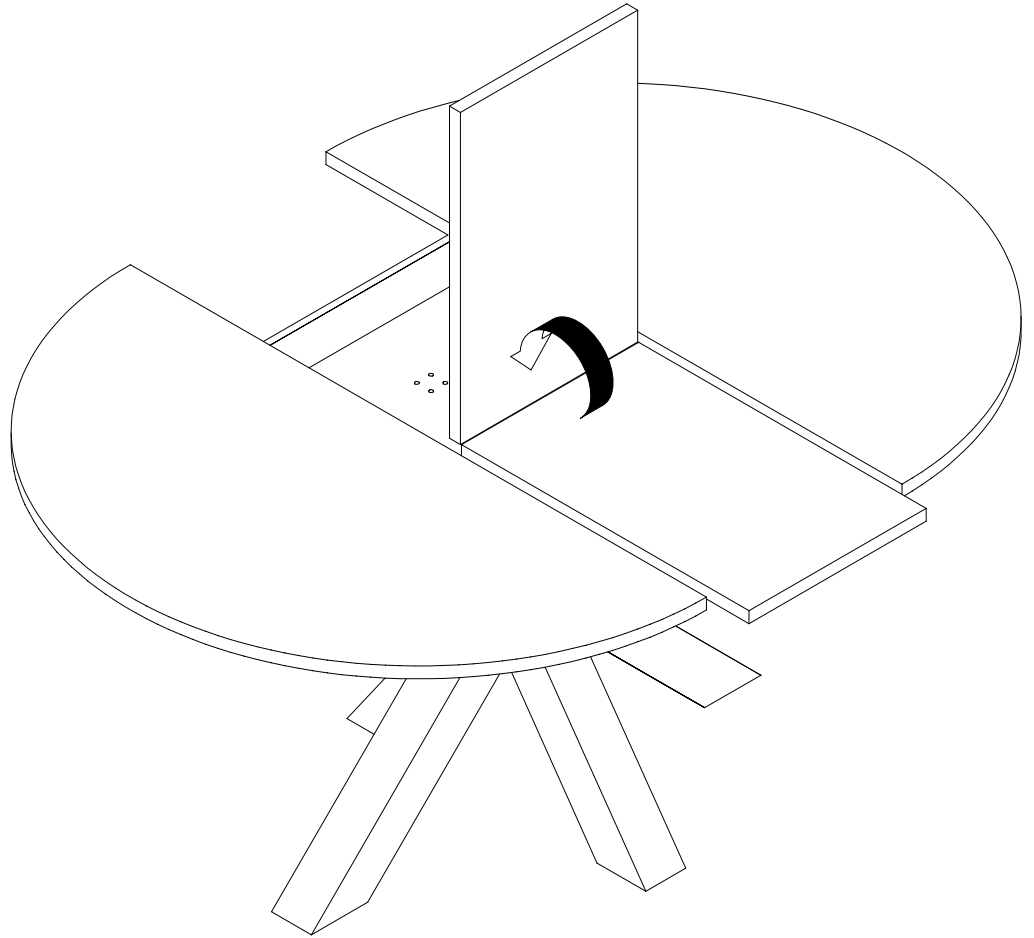

10

